


Model SX-800A, SX-2000

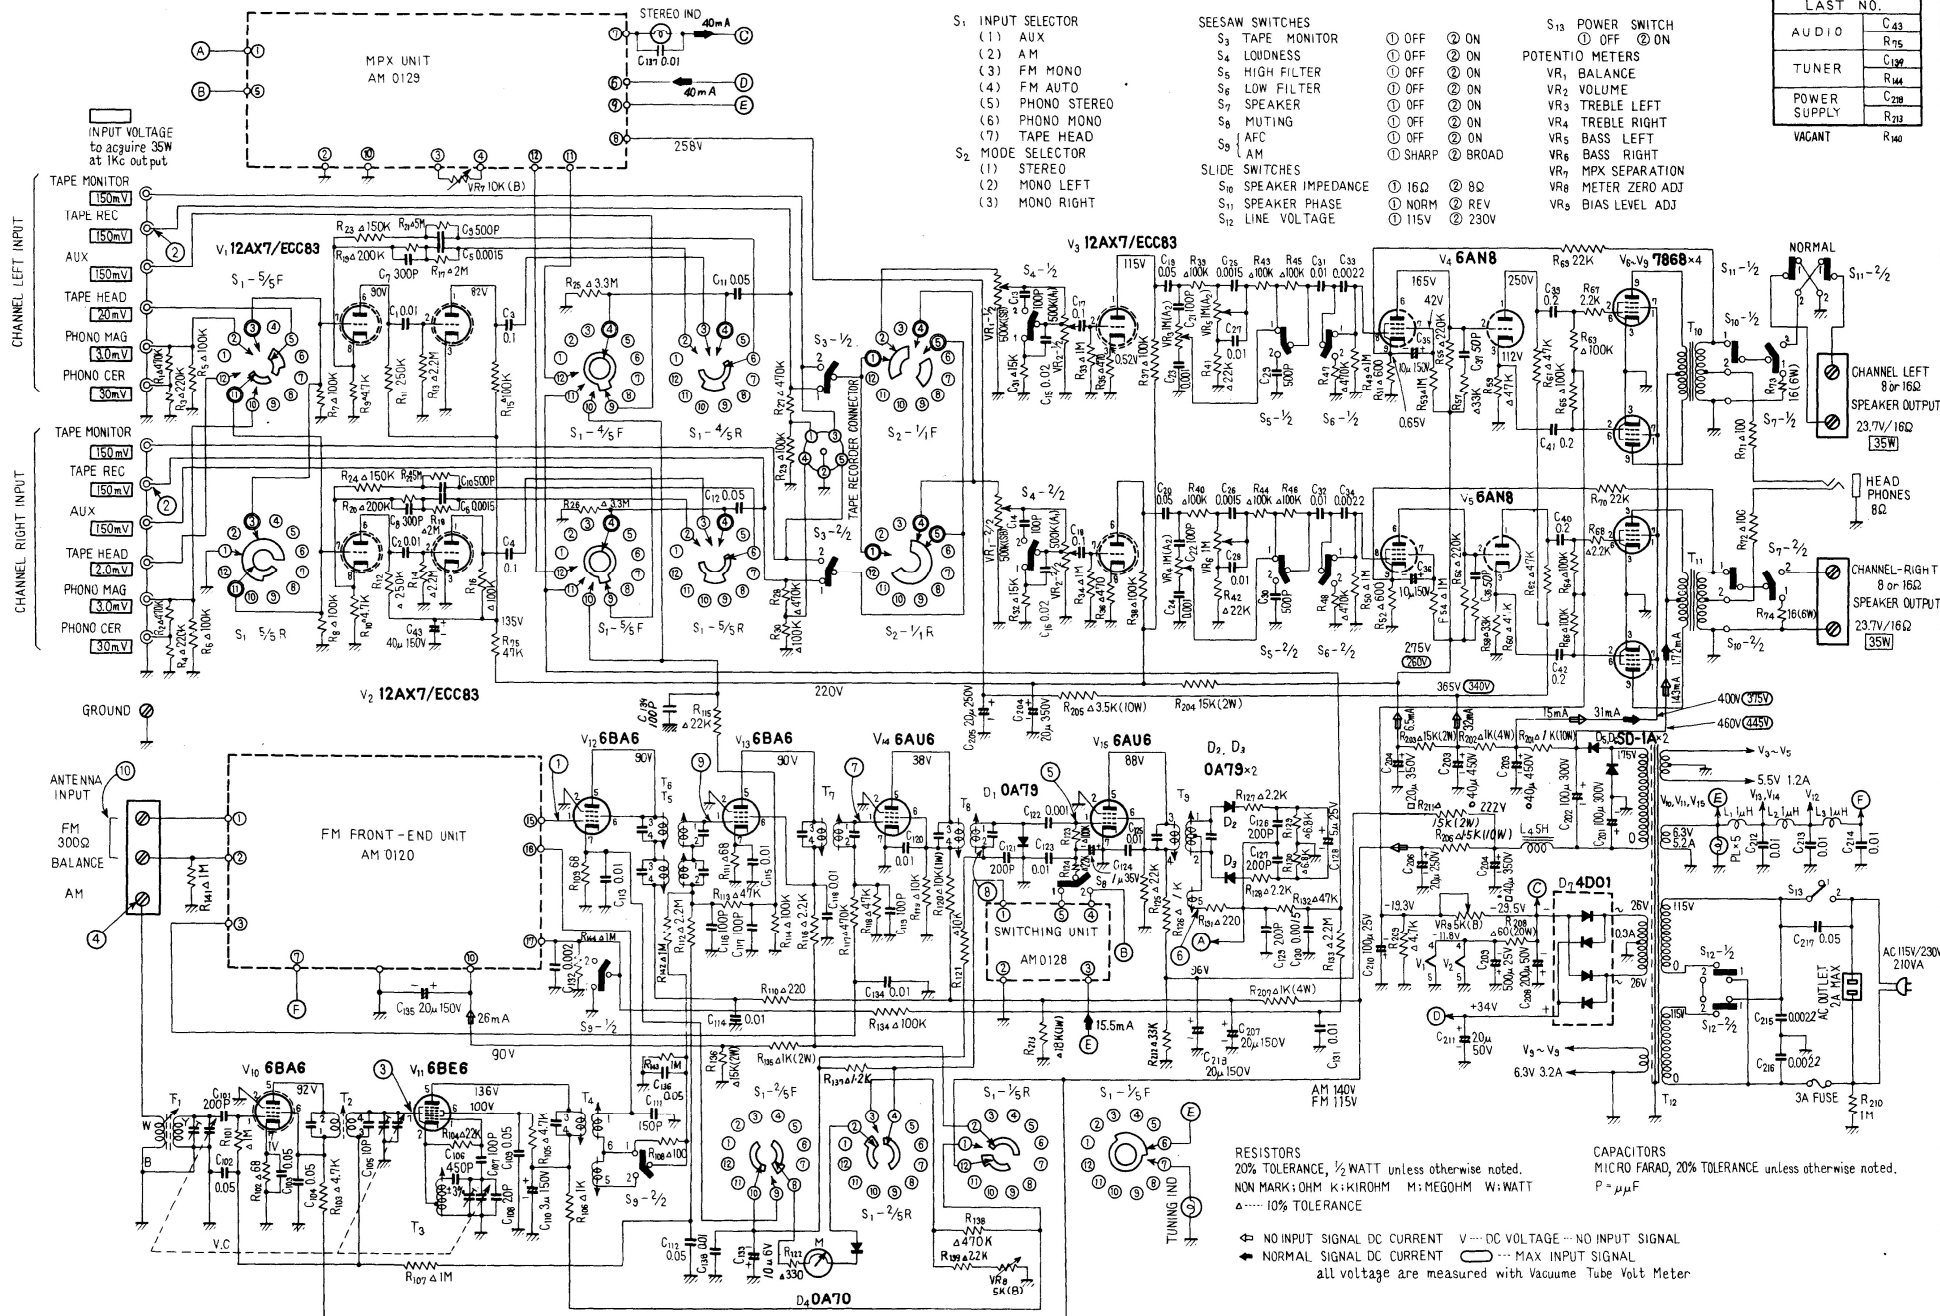

S₁ INPUT SELECTOR

- (1) AUX
 - (2) AM
 - (3) FM MONO
 - (4) FM AUTO
 - (5) PHONO STEREO
 - (6) PHONO MONO
 - (7) TAPE HEAD
- S₂ MODE SELECTOR
- (1) STEREO
 - (2) MONO LEFT
 - (3) MONO RIGHT

SEESAW SWITCHES

- S₃ TAPE MONITOR
- S₄ LOUDNESS
- S₅ HIGH FILTER
- S₆ LOW FILTER
- S₇ SPEAKER
- S₈ MUTING
- S₉ AFC
- S₁₀ SLIDE SWITCHES
- S₁₁ SPEAKER IMPEDANCE
- S₁₂ LINE VOLTAGE

- ① OFF ② ON
- ① OFF ② ON
- ① OFF ② ON
- ① OFF ② ON
- ① OFF ② ON
- ① OFF ② ON
- ① OFF ② ON
- ① SHARP ② BROAD
- ① 16Ω ② 8Ω
- ① NORM ② REV
- ① 115V ② 230V

S₁₃ POWER SWITCH

- ① OFF ② ON
- POTENTIOMETERS
- VR₁ BALANCE
 - VR₂ VOLUME
 - VR₃ TREBLE LEFT
 - VR₄ TREBLE RIGHT
 - VR₅ BASS LEFT
 - VR₆ BASS RIGHT
 - VR₇ MPX SEPARATION
 - VR₈ METER ZERO ADJ
 - VR₉ BIAS LEVEL ADJ

LAST NO.	
AUDIO	C43
	R75
TUNER	C127
	R144
POWER SUPPLY	C218
	R213
VACANT	R140